

Instructions for the Use and Care of the SousVide Supreme™ Demi

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully before using the machine.
2. Do not touch hot surfaces. Use handles or knobs. The lid and lid handles may get hot while cooking; use of an oven mitt when handling is advised.
3. To protect against electrical shock, do not immerse cord (power lead), plug, or Sous Vide Supreme™ Demi cooking unit in water or other liquid.
4. Children should not use this appliance. When in use around children, close supervision by an adult is necessary and the appliance should be kept out of their reach.
5. Keep the appliance and cord (power lead) away from hot surfaces, heated ovens, or stove burners. Operate the appliance only on a dry, stable surface, such as a table or countertop and away from any moving parts.
6. Unplug from outlet when not in use and before cleaning. Allow machine to cool before putting in or taking out parts or emptying the water bath. Do not immerse this appliance in water or any other liquid.
7. Do not use this appliance outdoors.
8. Do not use any attachment or accessory not recommended by Eades Appliance Technology, LLC. Use of such attachments or accessories may cause fire, electrical shock, or injury.
9. Do not use this appliance for any purpose other than its intended use.
10. Do not use this appliance if it has been dropped or appears to be damaged. Do not use this appliance if it has a damaged cord or plug, or after it malfunctions in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
11. Do not attempt to operate (heat) the unit without sufficient water in the bath to completely cover the bottom rack and to reach the FILL level mark on the sidewall.
12. Take care not to overfill the water bath; allow sufficient room to accommodate the volume of food pouches when added to water bath. Top off water in bath to no more than the MAX level mark after adding pouches, if necessary, to ensure the food inside the pouches is completely submerged.
13. Extreme caution must be used when moving an appliance containing hot water or other hot liquids, including the SousVide Supreme™ Demi. Always allow bath to cool before emptying unit.

**Any questions? Contact us at www.eventservicesgroup.co.uk
Telephone: 03333 442062**

14. Take care when removing the lid when unit is hot, as hot water will collect on the inside during cooking. Use oven mitts to remove lid and tip lid carefully to drain accumulated water into the water bath for safety.

15. To disconnect, press the OFF button for three (3) seconds to turn off, then remove plug from wall outlet.

16. This appliance is not intended for use by people with reduced physical, sensory or mental capabilities or who lack experience with cooking appliances.

ADDITIONAL IMPORTANT INFORMATION CONCERNING CORDS (POWER LEADS) AND PLUGS

1. If the power cord (lead) is damaged, only the manufacturer or its authorized service agent must replace it.

2. Protect the cord (power lead) from damage: do not crush the cord (power lead); do not pull the cord (power lead) around sharp edges or corners; do not immerse the cord (power lead) in water or other liquid or allow it to become wet; do not pull or carry the appliance by its cord (power lead) or use the cord (power lead) as a handle.

3. Do not allow the cord (power lead) to run underneath or be wrapped around the appliance. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.

4. To disconnect the cord (power lead) from the electric outlet (wall socket) grasp it by the plug, not the cord (power lead), to avoid injury.

5. Use only the short, detachable power-supply cord supplied with this appliance to avoid the risk of becoming entangled in, or tripping over, a longer cord. Do not use an extension cord (power lead) with this appliance.

IMPORTANT: SAVE THESE INSTRUCTIONS.

Do not attempt to repair this appliance yourself. Only an authorized representative of Eades Appliance Technology, LLC should perform any repairs. Please contact customer service at www.sousvidesupreme.com for more information.

Control Panel Display



1. Power on/off button
2. Celsius /Fahrenheit switch button
3. Mode Indicator lights
 - a. 'Water' temperature indicator light
 - b. 'Set' water temperature indicator light
 - c. Countdown 'Timer' light
 - d. 'Heating' element active indicator light
 - e. Timer active indicator light
4. Set temperature button
5. Set timer button
6. Increase/decrease value toggle (+/-) arrows
7. Start button

Setting the Machine for Use

1. Be sure water bath contains water before starting the machine.
2. Properly insert the electrical cord (power lead) into the power socket on the back of the machine and plug it into the wall socket.
3. Press and hold the 'Power on/off' button for 3 seconds to turn the machine on. You should feel a slight "click" and hear a tone.
4. The water temperature indicator light should illuminate and the display will read the current temperature of the water in the bath. (The machine will be preset to either Celsius or Fahrenheit readings. To change the setting, press the small Celsius/Fahrenheit switch button.)
5. To set the desired temperature, press the 'Set Temp' button. The 'Set' temperature indicator light will illuminate. The default temperature of 140°F/ 60°C should appear. Using the 'Increase/decrease value' toggle arrows, increase (+) the temperature or decrease (-) the temperature to set to your desired target temperature for cooking. When you have reached the target

temperature on the display, press START button to begin heating the water to that temperature. An audible alert sounds as the bath begins to heat. The 'Heating' indicator light will illuminate red until the target temperature is reached, at which time it will turn green. (Audible alarm, a repeating beep at 1-second intervals, will also indicate that the target temperature has been reached.)

6. Setting the Countdown 'Timer' function is not necessary to operate the machine. The heating element will operate regardless of whether the timer function has been set. Except when cooking tender or delicate foods at target temperatures that exceed their normal serving temperature—during which timing the cooking of your food pouch could be critical to prevent overcooking—precise timing of sous vide cooking usually is not necessary. To use the timer:

- a. Wait to set the timer until the water bath in your SousVide Supreme Demi has reached the desired target cooking temperature and you are ready to place the food pouches into the water bath.
- b. To use the timer function, press the 'Set Timer' button. Time value in minutes will appear in the display window.
- c. Increase/decrease timer setting using the +/- arrows. The time displayed will change in 1-minute increments to 30 minutes, then will speed up.
- d. When the desired length of cooking time has been reached, press START button to begin timing. After a few seconds the display will return to display the water bath temperature. To view remaining time at any point in the cooking process, press 'Set Timer' button.