MODEL NO.: 07269
INPUT: 236 - 240V /50HZ
LAME: 24 W (MAXX) X SPCS
WATERPROOF & DUSTPROOF CLASS: IP33
POWER CABLE: 2 X 1.5MM2 LENGTH 13.5M

#### IMPORTANT

IMPORTANT: PLEASE ENSURE THAT THE PLUG IS PLUGGED INTO THE MAINS SUPPLY INDOORS AND NOT OUTDOORS OR IN DAMP CONDITIONS.

#### HOW TO INSTALLATION:

- Screw the lamp into the lamp holder.
   Thread the hole of the book base by the rope, metal wire or hook.
- Fix the rope, metal wire or hook.
   Put the Gazebo lights at the proper positions.

## LIGHT

Ensure all lamps are firmly screwed in each holder. If one lamp fails or is not screwed down securely, the remaining lamps will stay alight, failed lamp should be replaced by same rated voltage and wattage. To operate, plug into 230–240V mains socker, indoors - see! lamp! section for details.

## FAILURE OF THIS ITEM TO LIGHT

- To locate the defect, please follow these steps:
- Check the fuse in the main plug.
   Make sure each lamp is crewed firmly into the lamp holder.
- 3. If the lump still doesn't work, replace with a new lump.

## HOW TO REMOVE THE LIGHT AND REPLACE THE LAMP.

- 1. Disconnect from the main supply before remove the light or replace the lamp.
- 2. Remove the shade before replace the lamp.
- Make sure the lamp is cool, then unscrew the lamp.
   Insert a new lamp, screw down clockwise until
- it makes contact.(see Fig.)



#### LAMPS

Standard 25W, 230-240V.

Replacements are available from most lighting stockists and retailers

## PLUG

This set is fitted with a plug protected by a 3A Fuse. Replace only with another

## FORE SAFETY'S SAKE

- Do not damage the insulation of the cable and the lamp holders.
   Do not connect this light set electrically to any other light set.
   Do not allow any plastic part to come into contact with beat or flame.
   Retain this box for storage and future reference.

COMPLIES WITH THE BS EN 60598-2-20.

# HOW TO RENEW THE LIGHTBULB

wrong





right



