

Safety Tips

- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- Always switch off and disconnect the power supply to the appliance before cleaning.
- Install the appliance out of the reach of children.
- Never insert hands or other objects into the appliance while it is connected to the power supply.
- Install the Fly Killer at least 1 metre away from food preparation areas.
- Never use near flammable objects.
- For INDOOR use only.
- If the power cord is damaged, it must be replaced by an EAZYZAP agent or a recommended qualified technician in order to avoid a hazard.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your EAZYZAP product.

Pack Contents

The following is included:

- Fly Killer
- Instruction manual
- Hanging chain

EAZYZAP prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your EAZYZAP dealer immediately.

Installation

1. Remove all packaging and protective film from the Fly Killer.
2. For best results, locate the Fly Killer in the darkest part of the room, but at least 1 metre away from food preparation areas.



Note: Close proximity to other light sources such as sky lights and windows will reduce the effectiveness of the Fly Killer.

3. If hanging the appliance, ensure the mounting substrate can hold the weight of the Fly Killer.
4. Connect the appliance to mains power.

Operation

The fly killer works by luring insects on to an electrified metal grid using ultra-violet light. It uses no chemicals and is pollution free. To use the Fly Killer:

1. Press the switch to the ON position.
2. The light will come on and the grid will become electrically charged.

Cleaning, Care and Maintenance

- Always switch off the power and disconnect the appliance from the power supply before cleaning.
- Clean the collection tray regularly with warm soapy water.
- DO NOT immerse the appliance in water. Wipe the safety guard and external casing with a damp cloth.
- Change the bulbs every 9 months.

Changing the Bulb

1. Turn Off the appliance and disconnect from the power supply.
2. Remove the catch tray.
3. Lay the appliance face down.
4. Unscrew the two screws holding the safety guard at the rear of the Fly Killer [Fig. 1].
5. Lift up the guard rail [Fig. 2].
6. Holding the ends of the bulb, twist it 'forwards' in its socket until it clicks [Fig. 3].
7. Slide the bulb up out of its sockets [Fig. 4].
8. Replace with a new bulb.



Fig. 1



Fig. 2

Model	Bulb Spare Code
Y724	AB702
Y725	AB705
Y726	AB708

9. Twist the new bulb 'backwards' to lock it back in place.
10. Replace the guard rail and the two screws.

 


Fig.3

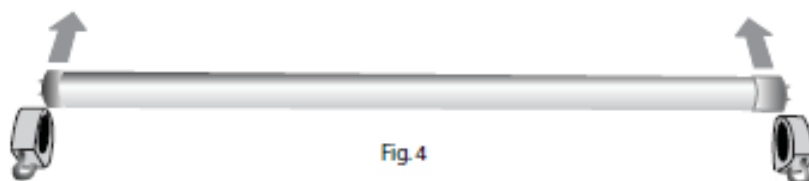


Fig.4

Troubleshooting

If your EAZYZAP Fly Killer develops a fault, please check the following points before making a service call:

Fault	Probable Cause	Action
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call EAZYZAP agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call EAZYZAP agent or qualified technician
	Tube is faulty or has not been fitted correctly	Refer to the 'Changing the Bulb' section.

Technical Specifications

Model	Voltage	Power	Current	Dimensions h x w x d (mm)	Weight
Y724	230V, 50Hz	23W	0.1A	260 x 350 x 118	2.33 kg
Y725	230V, 50Hz	38W	0.16A	325 x 495 x 118	2.82 kg
Y726	230V, 50Hz	45W	0.19A	395 x 645 x 118	4.03 kg

Exploded View

