



Rice Cooker

Instruction manual



Any questions? Contact us at www.eventservicesgroup.co.uk
Telephone: 03333 442062

Model: J193/J300/CB944



Table of Contents

Safety Tips	I
Introduction	I
Pack Contents	I
Operation	2
Cooking Tips	2
Using the Rice Cooker	2
Rice/Water Measurements	2
Cleaning, Care & Maintenance	3
J300 Only	3
Troubleshooting	3
Technical Specifications	4
Electrical Wiring	4
Compliance	4

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT immerse the appliance in water.
- Do not touch hot surfaces with bare hands. Always use protective gloves.
- Use extreme caution when moving or handling appliances containing hot oil or any other hot liquid.
- Never fill the inner bowl above the top water line.
- Never allow water or any liquid into the outer pot.
- Only use utensils provided with this appliance when using the rice cooker. Sharp objects may damage the non-stick coating of the inner bowl.
- Do not use the appliance for anything other than its intended use.
- Do not plug in the cable until ready to cook. The rice cooker's power will remain ON unless unplugged.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an BUFFALO agent or a recommended qualified technician in order to avoid a hazard.

Operation

Cooking Tips

Wash the rice thoroughly before cooking. This helps to stop rice grains sticking together.

- A small amount of vegetable oil in the rice can help separate grains.
- Brown or wild rice may require additional water.

Using the Rice Cooker

The inner bowl features measurement lines inside as a guide. The cup provided is designed to measure the rice and water.

1. Measure the desired amount of rice using the measuring cup supplied.



Note: One cup of rice will produce approximately two cups of cooked rice.

2. Rinse the rice in a sieve under running water to remove excess bran and starch.
3. Pour the rice into the inner bowl. To achieve evenly cooked rice, spread evenly around the bowl.
4. Add the correct amount of water by using the measuring cup, or by filling the inner bowl to the appropriate level.



Note: Slightly reduce the amount of water for firmer rice, and increase the amount for softer rice.

5. Place the inner bowl into the rice cooker.



Note: Ensure there is no rice or moisture on the outside of the inner bowl.

6. Replace the lid (J193/CB944) or close the lid and press down until the latch snaps shut (J300).
7. Connect the rice cooker to the power.
8. Depress the lever to the COOK position. The Cook light turns on.
9. Once cooking is finished the switch automatically moves to the WARM position. The Warm light turns on.
10. Keep the lid closed for 10 - 15 minutes for best results.
11. Carefully open the lid, allowing any steam and condensation to run back into the rice cooker.



WARNING: Always take care to avoid the expulsion of steam when removing the lid. Always use heat proof gloves when removing the inner bowl after cooking.


12. Stir the rice and serve as quickly as possible.
13. Disconnect the appliance from the power supply.

Cook light

Keep Warm light

Lever

Model shown: J300

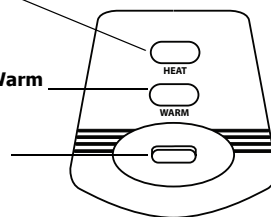

Rice/Water Measurements

As a general guide, use one full cup of water to each full cup of rice.

Add slightly more water for softer rice, or slightly less water for firmer rice.

Any questions? Contact us at www.eventservicesgroup.co.uk

Telephone: 03333 442062